



NVIDIA DRIVE AGX Thor Developer Kit

Hardware Quick Start Guide

Document History

DU-12082-001_1.2

Version	Date	Description of Change
1.0	July 18, 2025	Initial release
1.1	August 29, 2025	Updated the following: <ul style="list-style-type: none">• Table 1: Added Model numbers• Power: Updated AC and DC Power Connector sections• Versions: Updated production part numbers
1.2	October 9, 2025	Updated the following: <ul style="list-style-type: none">• Introduction: Updated link for NVIDIA DRIVE AGX SDK Developer Program• Added note to Table 5 for cable ordering details

Table of Contents

- Introduction 1
 - Before You Begin..... 1
- NVIDIA DRIVE AGX Thor Developer System Hardware..... 1
 - Product SKUs..... 1
 - Components..... 1
 - Connectors 4
 - Power 6
 - AC Power Connector 6
 - DC Power Connector..... 6
 - Additional Hardware and Accessories 7
 - PCIe Mini-SAS..... 8
 - Additional Accessory Purchase Information..... 8
 - Versions 9
 - Locating NVIDIA Part Number (NVPN) and Serial Number (S/N) 9
- Getting Started 10

List of Figures

Figure 1. NVIDIA DRIVE AGX Thor Developer System Components.....	2
Figure 2. Rear Panel Connectors for Bench Developer System (SKU 10).....	4
Figure 3. Rear Panel Connectors for In-Vehicle Developer System (SKU 12)	5
Figure 4. AC Power Connector and Cord (SKU 10)	6
Figure 5. DC Power Connector (SKU 12).....	7
Figure 6. NVIDIA NVPN and S/N Location.....	9
Figure 7. Rear Panel of the Developer System.....	10
Figure 8. 1G-T1 H-MTD Connector.....	11

List of Tables

Table 1. Product SKUs.....	1
Table 2. NVIDIA DRIVE AGX Thor Developer System Hardware List For SKU 10.....	1
Table 3. NVIDIA DRIVE AGX Thor Developer System Hardware List For SKU 12.....	2
Table 4. Additional Hardware Required	7
Table 5. PCIe Mini-SAS Cables	8
Table 6. Accessory Manufacturers and Part Numbers	8

Introduction

Before You Begin

This hardware quick start guide provides the basic steps needed to get your NVIDIA DRIVE AGX Thor™ Developer Kit (hereinafter referred to simply as **developer system**) up and running. The developer system ships with NVIDIA DriveOS™ pre-installed.

For more details beyond this hardware quick start guide, refer to the [NVIDIA DRIVE AGX Documentation](#) page for the latest information:

- > NVIDIA DRIVE AGX Thor Developer Kit Product Brief
- > NVIDIA DRIVE AGX Thor Developer Kit Mechanical and Installation Guide
- > Hardware accessories, which may be purchased separately
- > Details regarding configuration of your development environment

Developers are required to join as an [NVIDIA Developer](#) and be part of the [NVIDIA DRIVE AGX SDK Developer Program](#) to obtain access to software releases, documentation, and up-to-date information.



Note: Files marked with a lock icon require membership to the NVIDIA DRIVE AGX™ SDK Developer Program.

NVIDIA DRIVE AGX Thor Developer System Hardware

Product SKUs

To support Bench and In-Vehicle development, the developer system is offered in two different configurations, referred to as SKUs, as shown in the following table. The two SKUs differ only in their power input; all other features are the same.

Table 1. Product SKUs

SKU	Details	Model Number
10 ¹	Bench Solution – AC power input	P3960F
12	In-Vehicle Solution – DC power input	P3960D

Note1: SKU 10 is intended for bench development only; in-vehicle use is strictly prohibited.

Components

The following table lists the hardware components and accessories provided with the developer system, with corresponding illustrations shown in Figure 1.

Table 2. NVIDIA DRIVE AGX Thor Developer System Hardware List For SKU 10


No.	Item	Qty	Description
1	Developer System SKU 10	1	DRIVE AGX Thor Developer System
2	1G NIC Adapter	1	Converts H-MTD 1000BASE-T1 to RJ45 1000BASE-T
3	USB Cable Type A-to-C	2	USB Cable with Type-A and Type-C Connectors
4	USB Cable Type C-to-C	1	USB Cable with Type-C and Type-C Connectors
5	MATE-AX x4 to FAKRA Splitter	1	Breakout cable for MATE-AX x4 position connector to x4 FAKRA connectors. Same breakout cable is used for camera and display MATE-AX rear panel connectors.


No.	Item	Qty	Description
6	H-MTD x4 Splitter	1	Breakout cable for H-MTD x4 position connector used for Ethernet
7	H-MTD x6 Splitter	1	Breakout cable for H-MTD x6 position connector used for Ethernet









Table 3. NVIDIA DRIVE AGX Thor Developer System Hardware List For SKU 12

No.	Item	Qty	Description
1	Developer System SKU 12	1	DRIVE AGX Thor Developer System
2	Vehicle Harness Cables	1	Cables to interface the developer system to the vehicle
3	1G NIC Adapter	1	Converts H-MTD 1000BASE-T1 to RJ45 1000BASE-T
4	USB Cable Type A-to-C	2	USB Cable with Type-A and Type-C Connectors
5	USB Cable Type C-to-C	1	USB Cable with Type-C and Type-C Connectors
6	MATE-AX x4 to FAKRA Splitter	1	Breakout cable for MATE-AX x4 position connector to x4 FAKRA connectors. Same breakout cable is used for camera and display MATE-AX rear panel connectors.
7	H-MTD x4 Splitter	1	Breakout cable for H-MTD x4 position connector used for Ethernet
8	H-MTD x6 Splitter	1	Breakout cable for H-MTD x6 position connector used for Ethernet
9	Mounting tray	1	The tray to hold the developer system in a vehicle

Figure 1. NVIDIA DRIVE AGX Thor Developer System Components

 **Disclaimer:** The line-art images shown here are for illustration purposes only. Your developer system accessories may differ due to product enhancements, modifications, and substitutions.

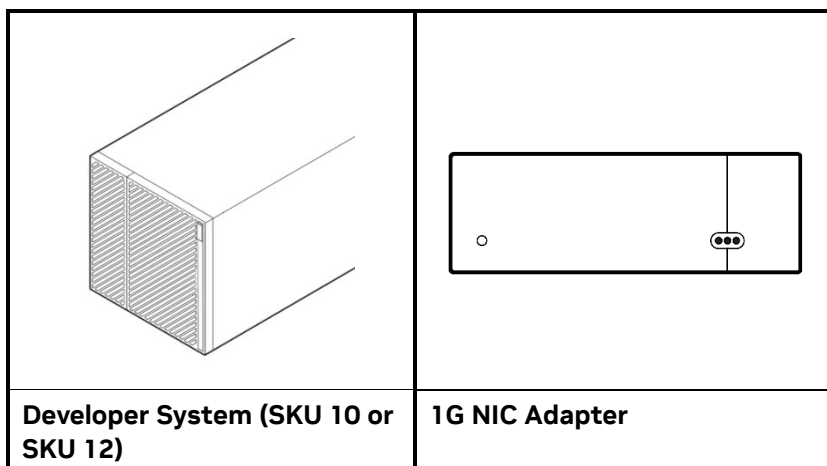

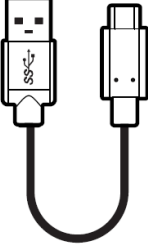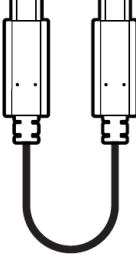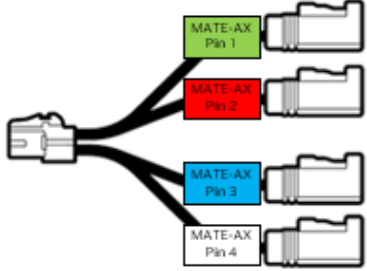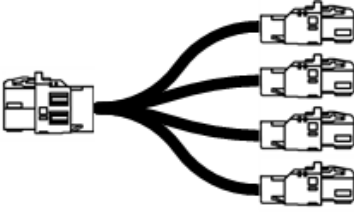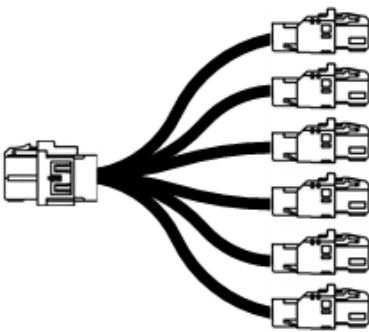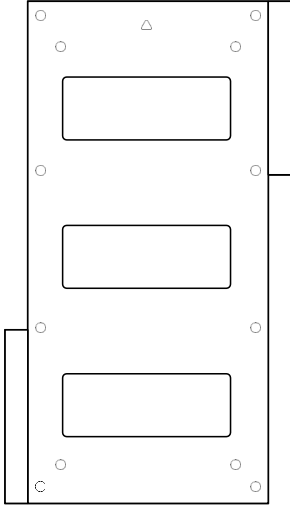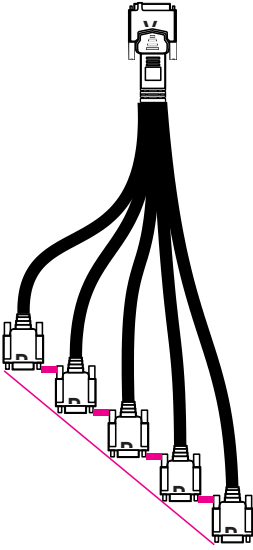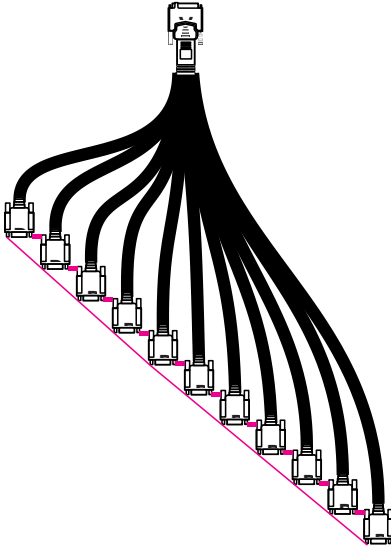		
<p>USB Cable Type A-to-C</p>	<p>USB Cable Type C-to-C</p>	<p>MATE-AX x4 to FAKRA Splitter</p>
		
<p>H-MTD x4 Splitter</p>	<p>H-MTD x6 Splitter</p>	<p>Mounting Tray (SKU 12 Only)</p>
		
<p>Vehicle Harness Cable 1 (SKU 12 Only)</p>	<p>Vehicle Harness Cable 2 (SKU 12 Only)</p>	

Connectors

The developer system supports a broad range of connectors, as shown in Figure 2 and Figure 3.

Note: Refer to the *DRIVE AGX Thor Developer Kit Mechanical and Installation Guide* for details.

Figure 2. Rear Panel Connectors for Bench Developer System (SKU 10)


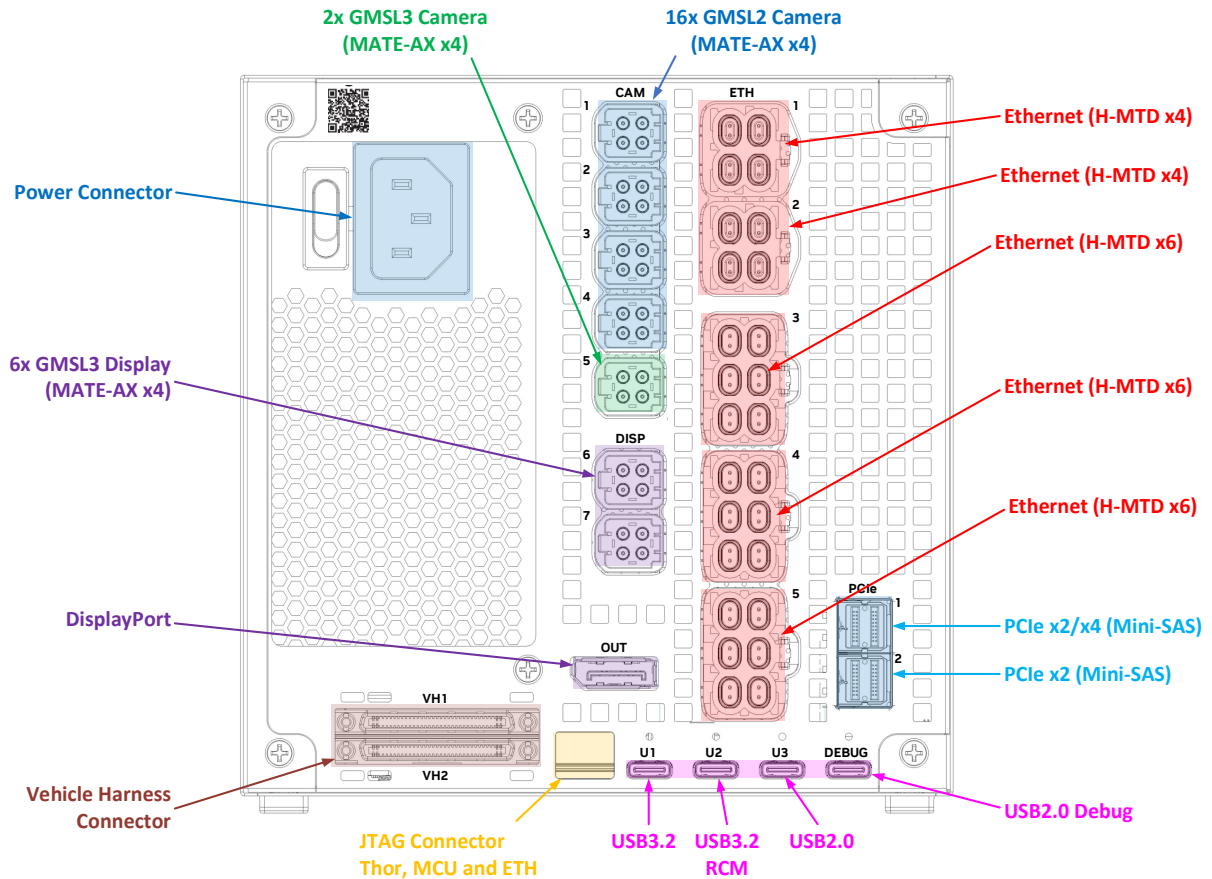


Figure 3. Rear Panel Connectors for In-Vehicle Developer System (SKU 12)

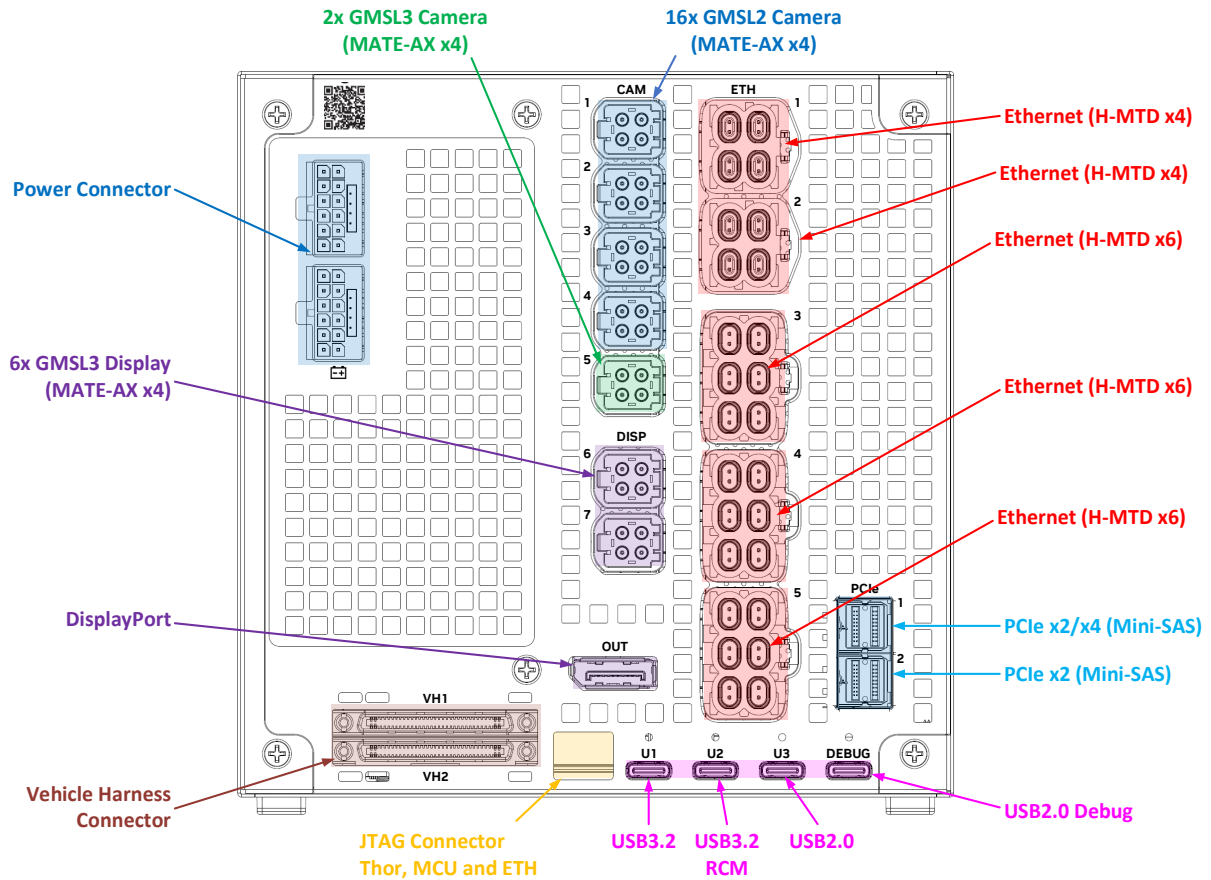


Caution: To prevent overheating, it is important to take airflow into consideration when mounting the developer system. Refer to the *DRIVE AGX Thor Developer Kit Mechanical and Installation Guide* for details.

Power

AC Power Connector

The Bench developer system (SKU 10) uses an AC power input with an IEC 60320 C14 inlet. The international rating of this connector is 250VAC/10A and a 16 AWG power cord at a minimum should be used. Figure 4 shows the zoomed-in location of the AC power connector on the rear panel on the left, and a power cord with an IEC 60320 C13 connector on the right. AC power cord must be purchased separately.


Figure 4. AC Power Connector and Cord (SKU 10)

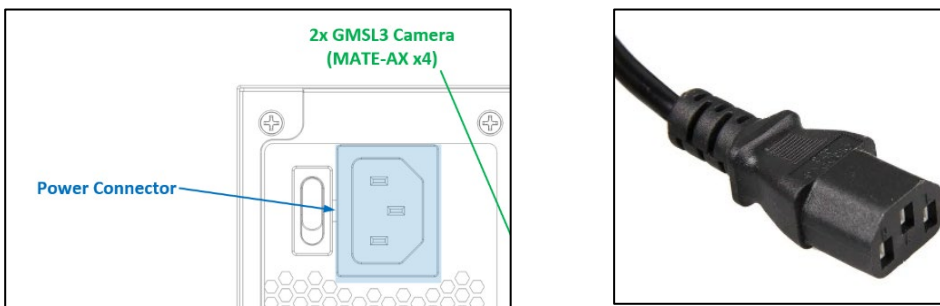

DC Power Connector

The In-Vehicle developer system (SKU 12) uses a DC power input. Figure 5 shows the zoomed-in location of the DC power connector on the rear panel. Refer to the *DRIVE AGX Thor Developer Kit Mechanical and Installation Guide* (DI-12070-001) for pinout details.

Figure 5. DC Power Connector (SKU 12)

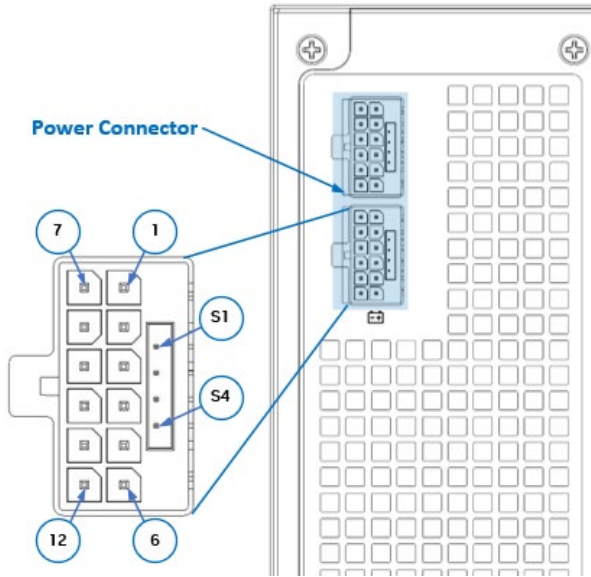

Additional Hardware and Accessories

This section provides information on additional hardware components required for the developer system as well as optional accessories that expand the usage of the developer system.

The following table lists additional hardware components required for the developer system.

Table 4. Additional Hardware Required

Item	Description
1	VESA® DisplayPort™ Display with DisplayPort Cable ¹
2	Ubuntu Host PC for Cross-Compiling, Flashing, and Console Access
3	Ethernet Cable for Networking Access
4	Keyboard
5	Mouse



Note 1: The developer system does not support passive DP to HDMI adapters; an ACTIVE DP-to-HDMI or DP-to-DVI adapter may be used with HDMI or DVI displays. The display must support 1080P resolution. Refer to the *NVIDIA DriveOS [Linux | QNX] SDK Developer Guide* for information about supporting displays of different resolutions.

PCIe Mini-SAS

Multiple developer systems can be connected using the PCIe interfaces and Mini-SAS cables. Table 5 lists the PCIe mini-SAS cables that are compatible with the developer system.



Note: The developer system uses a customized Mini-SAS pin definition with additional sideband signals to synchronize the PCIe link between developer systems. Standard PCIe Mini-SAS cables will **NOT** work.

Table 5. PCIe Mini-SAS Cables

Description	Mfg P/N
Amphenol Mini-SAS cable assembly, 0.5m length	NMDDKF-N906
Amphenol Mini-SAS cable assembly, 1.0m length	NMDDKF-N901
Amphenol Mini-SAS cable assembly, 2.0m length	NMDDKF-N902



Note: Refer to <https://cablesondemand.com/contact-us> for details on how to purchase the Mini-SAS cables.

Additional Accessory Purchase Information

The following table provides the manufacturer's part numbers in case additional accessories need to be purchased.

Table 6. Accessory Manufacturers and Part Numbers

Label	Manufacturer	Mfg P/N
USB Cable Type A-to-C	Simula Technology, Inc	CB8A5E-6200-10F
USB Cable Type C-to-C	Wieson America Inc.	AB9932-0011-001-HH
MATE-AX x4 to FAKRA Splitter ¹	TE Connectivity Ltd.	2488334-3
H-MTD x4 Splitter	MD Elektronik GmbH	10472867
H-MTD x6 Splitter	MD Elektronik GmbH	10472869
CEM5 Hybrid Receptacle Housing	Amphenol	10161719-124GLF



Note1: Contact TE at nvidia-orders@md-elektronik.com for details on how to purchase the splitter cable.

Refer to [DRIVE AGX Thor Accessories](#) for additional DRIVE AGX Thor developer system hardware accessories for purchase directly from NVIDIA or from Authorized [Distributors](#).

Versions

The DRIVE AGX Thor developer system production versions are listed below.


- > Production SKU 10: 940-63960-0010-000 (AC power cords not included)
- > Production SKU 12: 940-63960-0012-000 (DC power connector not included)

Locating NVIDIA Part Number (NVPN) and Serial Number (S/N)

The NVIDIA NVPN and S/N are located on the bottom cover, rear side/back panel of the unit, as shown in Figure 6.

Figure 6. NVIDIA NVPN and S/N Location

Bottom Cover

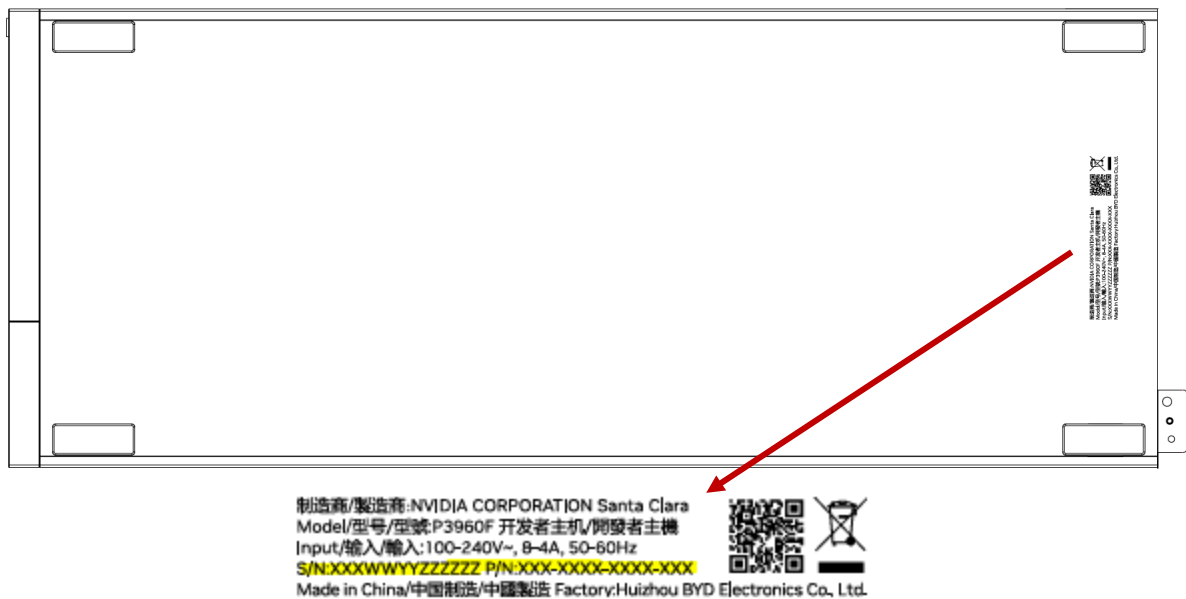


Getting Started

To get started with DRIVE AGX, scan the QR code on the back panel of the developer system; this will take you to the [DRIVE AGX - Get Started | NVIDIA Developer](#) website.

To use your developer system for the first time, you will need the following:

- > Main AC Power Cable
- > Two USB cables, Type A-to-C or Type C-to-C
- > DisplayPort Cable (optional)
- > Monitor supporting 1080P resolution
- > Keyboard (optional)
- > Mouse (optional)
- > Ubuntu 24.04 Host PC
- > Network Ethernet port that supplies IP address via DHCP (optional)

Figure 7. Rear Panel of the Developer System

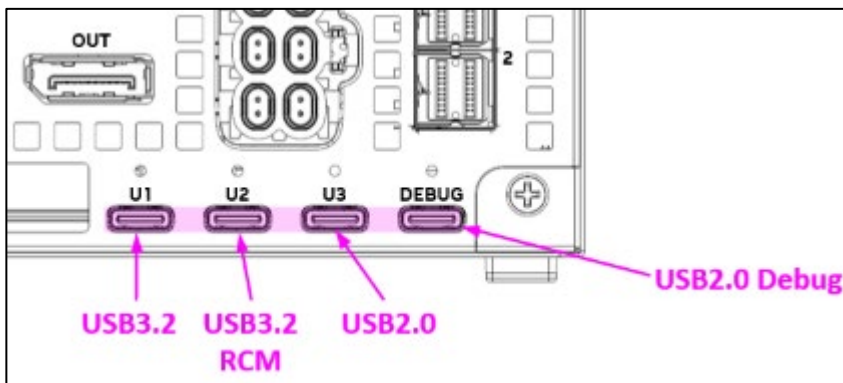


Use the following steps to get your **developer system** up and running:

1. Connect the **Main AC Power Cable** to the **developer system**.
2. Connect the first **USB cable Type C-to-A** (or **Type C-to-C**, depending on your Host PC) from the **Ubuntu Host PC** to the developer system USB Type-C port labeled “**DEBUG**,” which is a USB 2.0 port.
3. Connect the second **USB cable Type C-to-A** (or **Type C-to-C**, depending on your Host PC) from the **Ubuntu Host PC** to the developer system **USB Type C** port labeled “**U2**.” This USB connection is used for recovery mode flashing.

4. Connect a **DisplayPort monitor** to the DisplayPort labeled “OUT.” Note the monitor must support the default developer system resolution of 1080P.
5. Connect a keyboard and mouse to the USB Type C port labeled “U1” or “U3”.
6. Networking Connections:
 - 1G NIC Adapter only works with 1G-T1 port

Figure 8. 1G-T1 H-MTD Connector

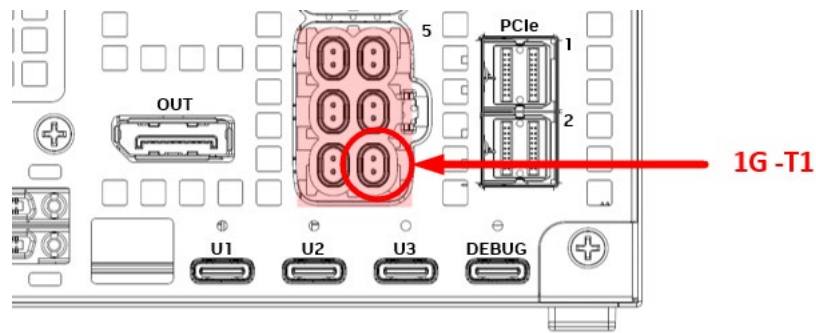

Refer to the *DRIVE AGX Thor Developer Kit Mechanical and Installation Guide* (DI-12070-001) for Ethernet port details.

7. Press the **Main Power Switch** to the **ON** position.
8. Initial Setup:
 - a. If Display is connected, follow on-screen display to accept the End User License Agreement (EULA), set username and password, SSH profile, and additional users.
 - b. If Display is not detected, type NO on Thor’s UART console to run the initial setup steps on the console. Refer to the Terminal Emulation section in the DriveOS 7.0 Linux SDK Developer Guide for more information on setting up a terminal emulator on the Ubuntu Host PC.

After completing these prompts, the platform boots to the Ubuntu Desktop user interface (if display is connected) and login prompt on the UART console. To configure your development environment, visit the [NVIDIA DRIVE AGX Thor Setup](#) page for more detailed information.

Notice

This document is provided for information purposes only and shall not be regarded as a warranty of a certain functionality, condition, or quality of a product. NVIDIA Corporation ("NVIDIA") makes no representations or warranties, expressed or implied, as to the accuracy or completeness of the information contained in this document and assumes no responsibility for any errors contained herein. NVIDIA shall have no liability for the consequences or use of such information or for any infringement of patents or other rights of third parties that may result from its use. This document is not a commitment to develop, release, or deliver any Material (defined below), code, or functionality.

NVIDIA reserves the right to make corrections, modifications, enhancements, improvements, and any other changes to this document, at any time without notice.

Customer should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

NVIDIA products are sold subject to the NVIDIA standard terms and conditions of sale supplied at the time of order acknowledgement, unless otherwise agreed in an individual sales agreement signed by authorized representatives of NVIDIA and customer ("Terms of Sale"). NVIDIA hereby expressly objects to applying any customer general terms and conditions with regards to the purchase of the NVIDIA product referenced in this document. No contractual obligations are formed either directly or indirectly by this document.

NVIDIA products are not designed, authorized, or warranted to be suitable for use in medical, military, aircraft, space, or life support equipment, nor in applications where failure or malfunction of the NVIDIA product can reasonably be expected to result in personal injury, death, or property or environmental damage. NVIDIA accepts no liability for inclusion and/or use of NVIDIA products in such equipment or applications and therefore such inclusion and/or use is at customer's own risk.

NVIDIA makes no representation or warranty that products based on this document will be suitable for any specified use. Testing of all parameters of each product is not necessarily performed by NVIDIA. It is customer's sole responsibility to evaluate and determine the applicability of any information contained in this document, ensure the product is suitable and fit for the application planned by customer, and perform the necessary testing for the application in order to avoid a default of the application or the product. Weaknesses in customer's product designs may affect the quality and reliability of the NVIDIA product and may result in additional or different conditions and/or requirements beyond those contained in this document. NVIDIA accepts no liability related to any default, damage, costs, or problem which may be based on or attributable to: (i) the use of the NVIDIA product in any manner that is contrary to this document or (ii) customer product designs.

No license, either expressed or implied, is granted under any NVIDIA patent right, copyright, or other NVIDIA intellectual property right under this document. Information published by NVIDIA regarding third-party products or services does not constitute a license from NVIDIA to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property rights of the third party, or a license from NVIDIA under the patents or other intellectual property rights of NVIDIA.

Reproduction of information in this document is permissible only if approved in advance by NVIDIA in writing, reproduced without alteration and in full compliance with all applicable export laws and regulations, and accompanied by all associated conditions, limitations, and notices.

THIS DOCUMENT AND ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL NVIDIA BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF NVIDIA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Notwithstanding any damages that customer might incur for any reason whatsoever, NVIDIA's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms of Sale for the product.

Trademarks

NVIDIA, the NVIDIA logo, NVIDIA DRIVE, NVIDIA DRIVE Thor are trademarks and/or registered trademarks of NVIDIA Corporation in the U.S. and other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

VESA DisplayPort

DisplayPort and DisplayPort Compliance Logo, DisplayPort Compliance Logo for Dual-mode Sources, and DisplayPort Compliance Logo for Active Cables are trademarks owned by the Video Electronics Standards Association in the United States and other countries.

HDMI

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Arm

Arm, AMBA, and Arm Powered are registered trademarks of Arm Limited. Cortex, MPCore, and Mali are trademarks of Arm Limited. All other brands or product names are the property of their respective holders. "Arm" is used to represent Arm Holdings plc; its operating company Arm Limited; and the regional subsidiaries Arm Inc.; Arm KK; Arm Korea Limited.; Arm Taiwan Limited; Arm France SAS; Arm Consulting (Shanghai) Co. Ltd.; Arm Germany GmbH; Arm Embedded Technologies Pvt. Ltd.; Arm Norway, AS, and Arm Sweden AB.

OpenCL

OpenCL is a trademark of Apple Inc. used under license to the Khronos Group Inc.

Copyright

© 2024-2025 NVIDIA Corporation. All rights reserved.